
B&G 5 LITRE SPRAYER

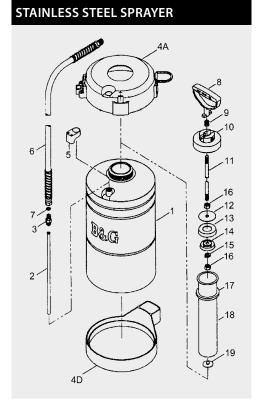

#	PART	ORDER#
1	T-500-3	Tank, 5 litre
2	FS-297	Siphon tube, 5 litre
3	HA-298	Adaptor, hose
4A	TT-1	Tank top, 5 litre
4D	TB-1	Tank bottom
5	5700-H	Tip holder
6	D-50	Hose, 4 ft. red
7	D-51-P	Hose washer
8	P-275	Pump handle
9	P-276	Pumping lock spring
10	P-274	Pump cap
11	PF-273	Plunger rod, 5 litre
12	P-272	Back plate
13	NP-277	Polypropylene cup
14	NP-270	Cup spreader plate
15	P-269A	Lock washer
16	P-269	Plunger nut
17	P-268	Pump gasket
18	PF-267	Pump tube, 2 gal.
19	PV-266	Check valve
	GD 124 KITS	Gasket set